

APPLICATION

— F I R S T S T E P S

FOR APPLICATION YOU'LL NEED

- ADHESIVE PAPER TAPE ✓
- PAPER KNIFE / SCISSORS ✓
- HAIR DRYER (OR HEAT GUN) ✓
- DEGREASING AGENT ✓
- ALCOHOL BASED MIXTURE ✓
- APPLICATION KIT (OPTIONAL) ✓

BEFORE YOU START

Read carefully this guide until the end.

Inspect your plastics, if they are scuffed and scratched or have major damage. It may be worth looking at replacing them. Before applying the graphics kit your dirt bike plastics need to be in a reasonable / good condition.

Wash your hands. It is very important to have clean hands while you are preparing surface and working with graphics. Oily / dirty hands will reduce the ability of your graphics adhere to the plastics

PREPARING SURFACE

Remove old graphics. You can use hair dryer or heat gun to warm the old graphics for easy removal. Remove any remaining glue residues with app. kit *ONE* (or a degreasing agent) and clean the surface with app. kit *TWO* (or alcohol based mixture). You do not want to leave any glue residue from the old graphics, oils or dirt. We recommend you to keep plastics in a room with mild temperature, for several hours.



APPLYING GRAPHICS


TIPS

DO NOT SPRAY WATER ON THE ADHESIVE SIDE OF THE GRAPHIC. USE THE APP. KIT THREE FOR BEST RESULTS! OUR GRAPHICS ALSO HAVE AIR FLOW TECHNOLOGY, WHICH ENABLES THE AIR TO COME OUT EASILY.

Don't rush or you will end up with a poor result, have plenty of time and space to help achieve a great look. To apply your graphics, it is easier to leave the plastics on the bike, since they will provide a solid 'work bench'. Allow graphics to sit for 24 hrs after installation and again gently heat the graphics with the hairdryer, which will help them to seal.

Be careful to not overheat.


1

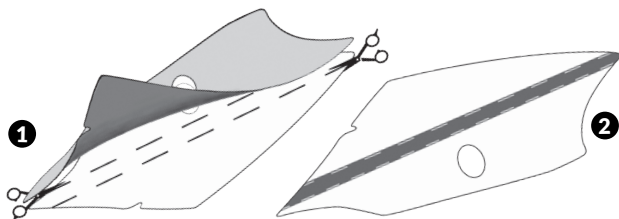

Dry application: Choose your decal and align it to the plastic to confirm it is the correct one. Peel the backing paper away from the background till the middle. Then cut a slice of the paper with about 5cm, this way will help you center and fix the decal. Proceed again from 1 to 4 with the other plastics.

Wet application: Peel the whole backing paper away from the background.


2

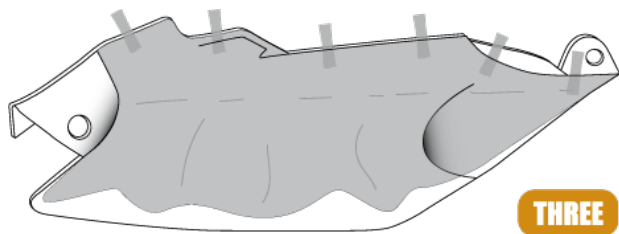

Dry application: Align your decal on the plastic (e.g. number plate). Hold it with adhesive paper tape, if needed.


Wet application: Spray the surface with app. kit **THREE** and align your decal on the plastic. Hold it with adhesive paper tape, if needed.

3

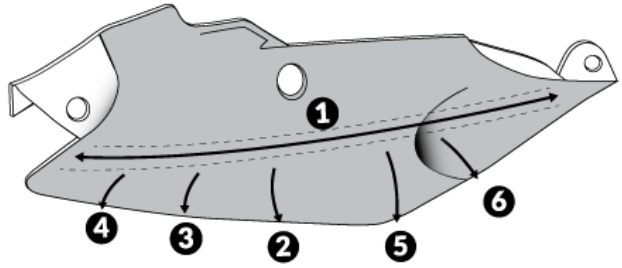

Working in small sections, use your thumb (or squeegee) to apply pressure to the graphic, being careful not to get any wrinkles or bubbles. You have to work from the center out. If you get bubbles, carefully peel the section up and try again, until you get a good result. Then smooth out the bubble section moving towards the edges of the graphic.

4

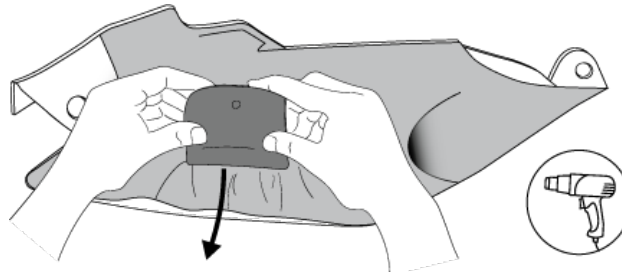

If you have sharp curves in your plastic (e.g. number plate over exhaust pipe), use the hairdryer or heat gun to heat the graphics so they are more pliable. Be careful not to overheat!

We would very much appreciate if you could send some digital pictures of your bike after the installation to info@tmx-graphics.com, for our online gallery.

Thank you for choosing TMX Graphics

TMX Graphics support team!

JOIN US:
TMXGRAPHICS

