


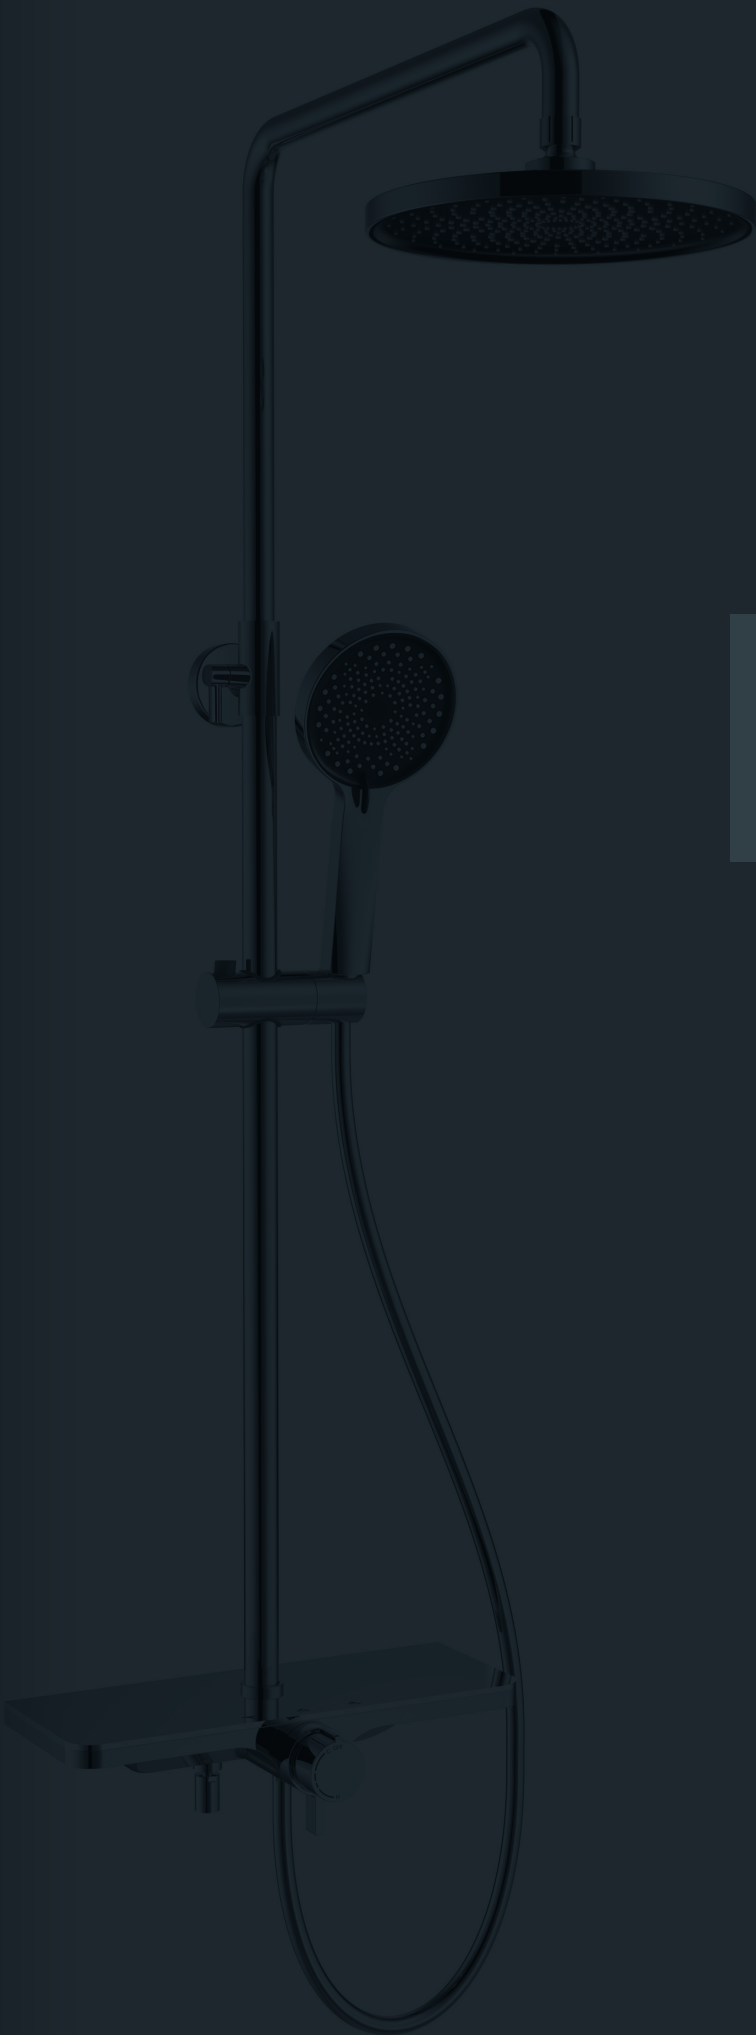

KOLLER POOL

INSTALLATION MANUAL
ІНСТРУКЦІЯ З МОНТАЖУ

TREND series

TREND series



Art.: 1143360305, 1127390605



Art.: 1127390306, 1127390606

INSTALLATION MANUAL

3-5

SHOWER SYSTEM

Art.: **1143360305, 1127390605**

SHOWER SYSTEM WITH THERMOSTAT

Art.: **1127390306, 1127390606**

ІНСТРУКЦІЯ З МОНТАЖУ

6-7



ДУШОВА СИСТЕМА

Art.: **1143360305, 1127390605**

ДУШОВА СИСТЕМА З ТЕРМОСТАТОМ


Art.: **1127390306, 1127390606**

INSTALLATION MANUAL

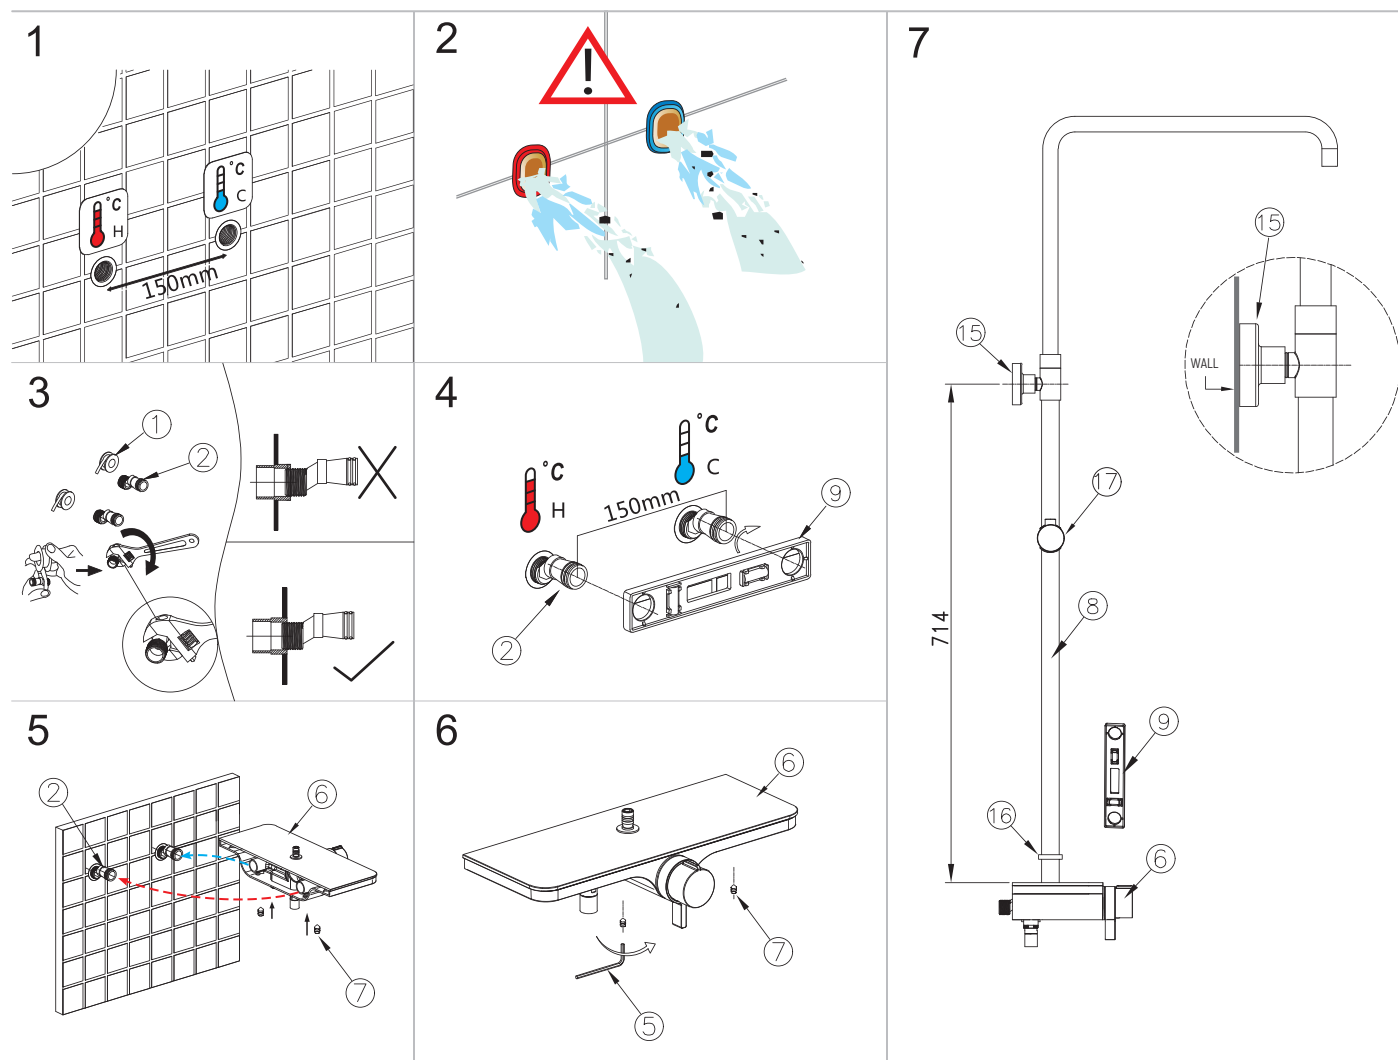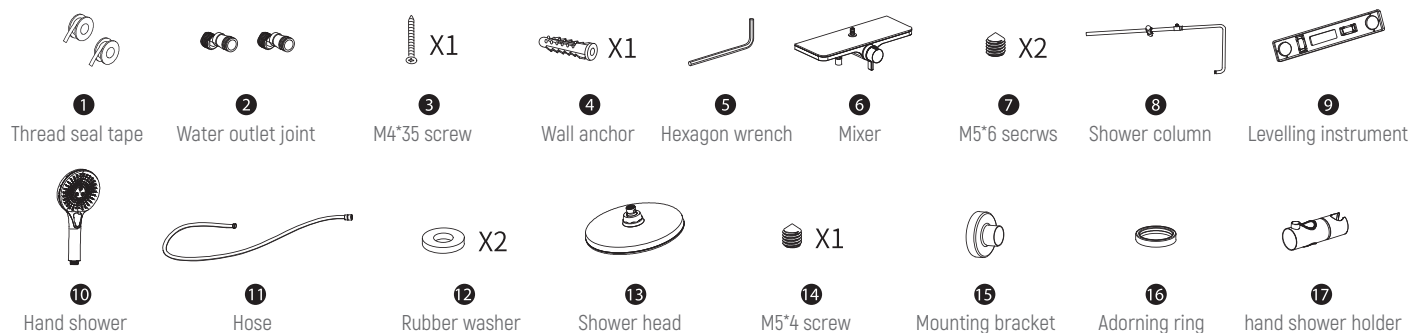


1. The distance of pipe center is 150 mm.
2. Cleaning inner pipe.
3. Wrap the thread seal tape (1) on water outlet joint (2), Screw the water outlet joint (2) to the hot/cold waterinlet on the wall.

4. Keep balance of the joint (2) by use the leveling instrument (9).
5. Insert the mixer (6) into water outlet joint (2).
6. Fix the mixer (6) by M5*6 screws (7) through Hexagon wrench (5).
7. Insert the shower column (8) into mixer (6), use the leveling instrument (9) to mark the proper location of mounting bracket (15).

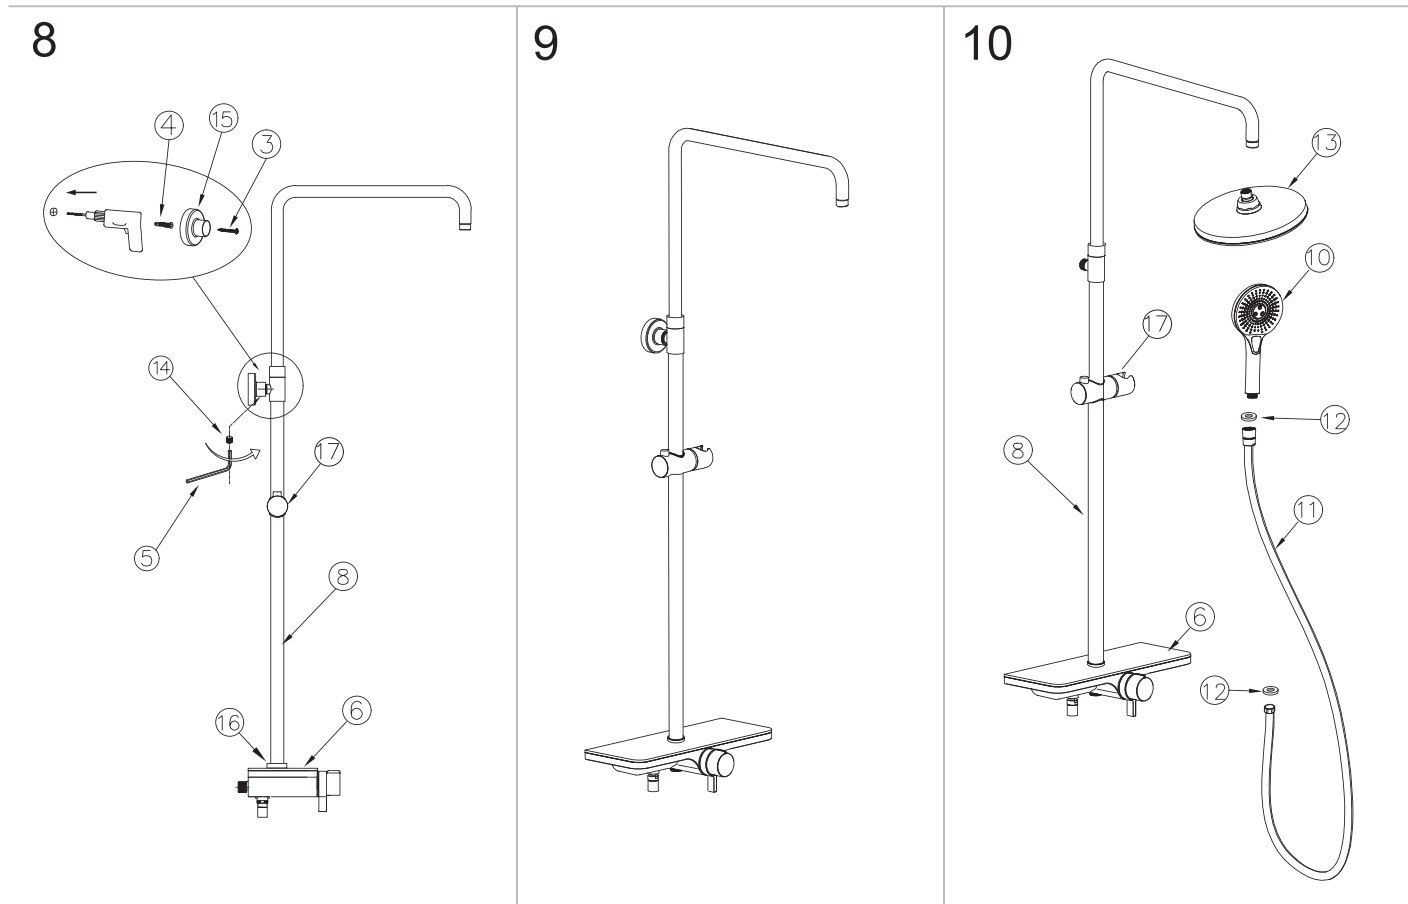


8. Take down the shower column (8), and drill a 6 mm hole on the marked place. Put wall anchor (4) into the hole and fix the mounting bracket (15) on the wall with M4*35 screw (3). Insert the shower column (8) into the mixer (6) through the hand shower holder (17) and the decorative O-ring (16), then fix the shower column (8) with mounting bracket (15) by M5*4 screw (14) which are already in mounting bracket (15) with Hexagon wrench (5).
9. Picture showing
10. Screw the shower head (13) to the shower column (8), Place rubber washer (12) into each nut of hose (11), and secure one nut to the mixer (6), the other nut to the hand shower (10). Put the hand shower (10) onto the holder (7).

ІНСТРУКЦІЯ З МОНТАЖУ

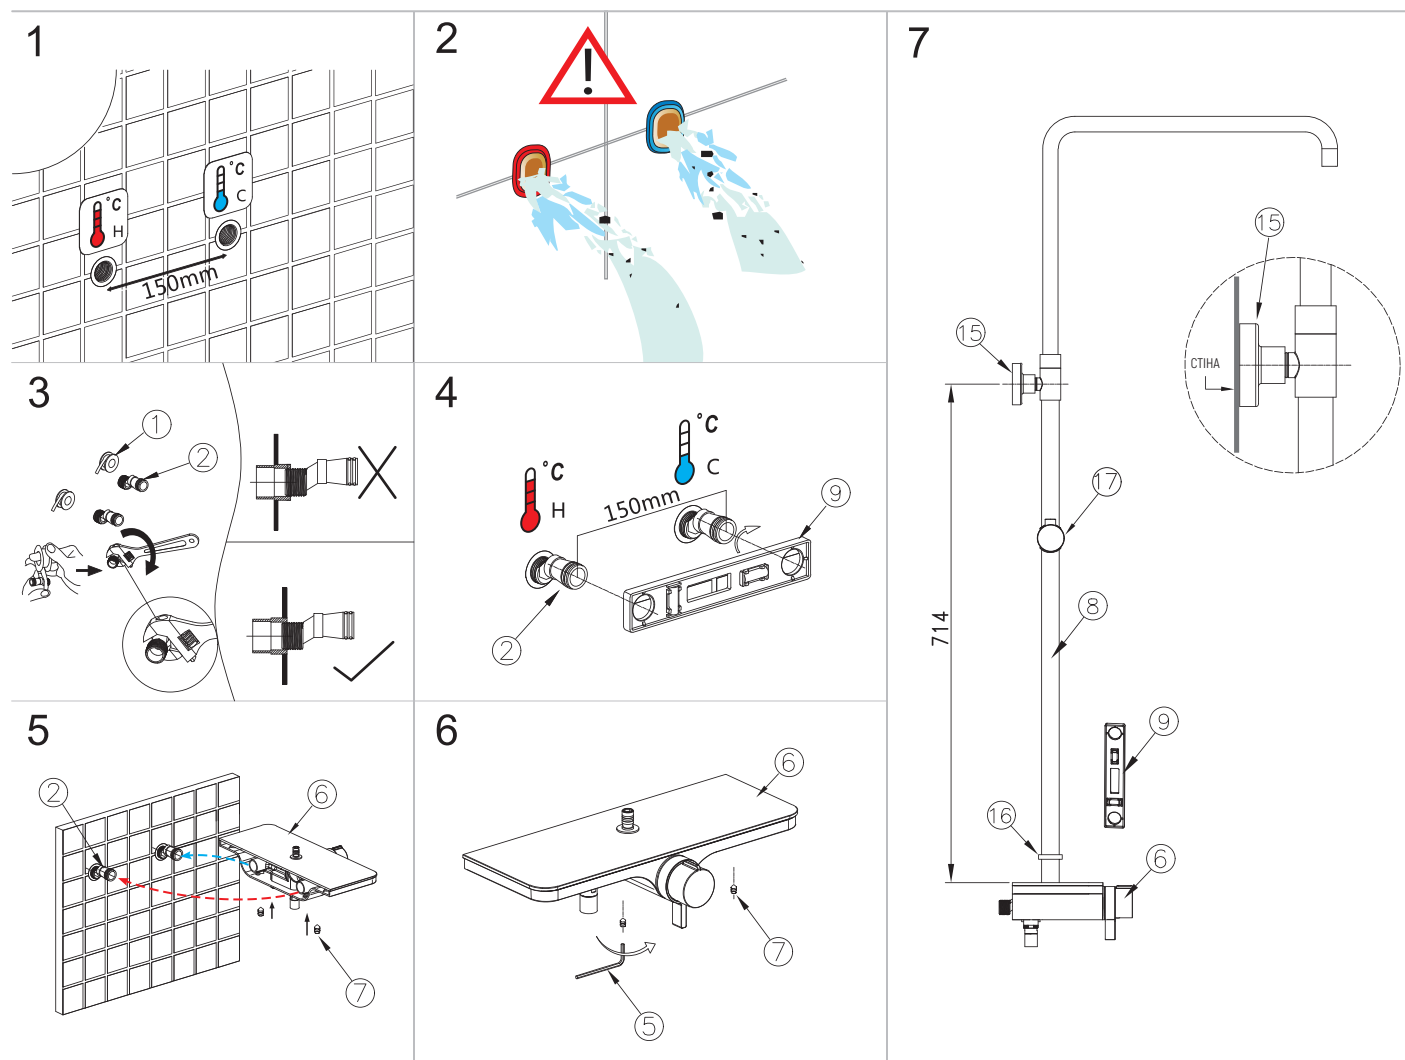

1. Міжцентрова відстань виводів труб складає 150 мм.
2. Промити водопровідну мережу від усіх забруднень, щоб уникнути пошкодження змішувача.
3. Ущільніть різьбу ексцентриків із підключення гарячої/холодної води (2) за допомогою PTFE стрічки (1).

4. За допомогою рівня (9) відкоригуйте ексцентрики з'єднувачі (2).
5. З'єднайте змішувач (6) з ексцентриковими з'єднувачами (2).
6. Закріпіть змішувач (6) гвинтами M5*6 (7) за допомогою шестигранного ключа (5).
7. Вставте душову колону (8) у змішувач (6), скористайтесь рівнем (9), щоб відмітити місце розташування монтажного кронштейна (15).

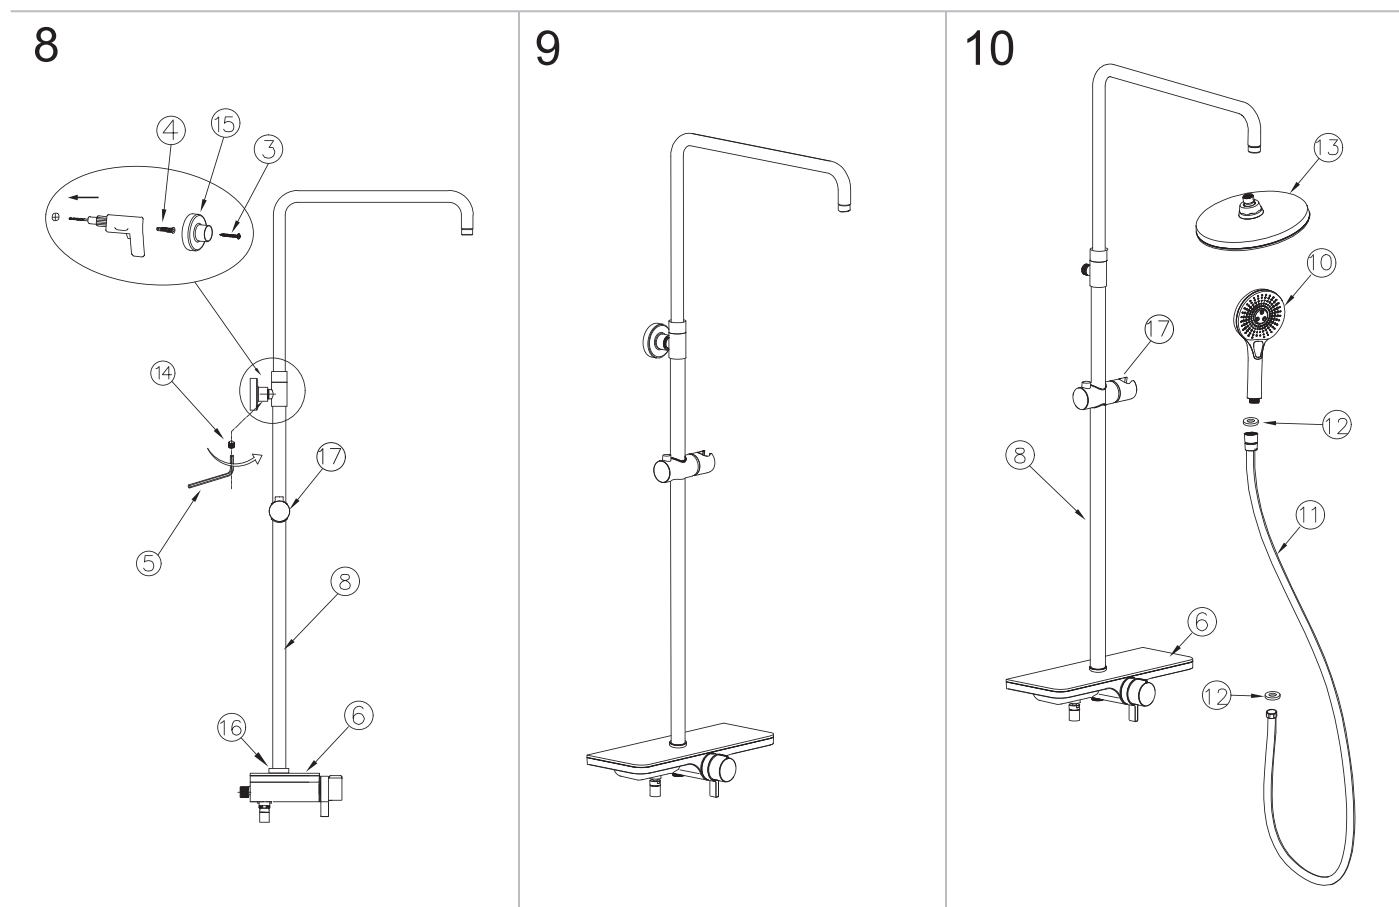

8. Зніміть душову колону (8), просвердліть отвір діаметром 6 мм у відміченому місці. Вставте дюбель (4) в отвір та закріпіть монтажний кронштейн (15) на стіні шурупом M4*35 (3). Вставте душову колону (8) у змішувач (6) через тримач ручного душу (17) і декоративне кільце (16), за допомогою шестигранного ключа (5) закріпіть душову колону (8) з монтажним кронштейном (15) гвинтом M5*4 (14).
9. Вигляд душової системи має відповідати зображенню.
10. Прикрутіть верхній душ (13) до душової колони (8), встановіть гумові шайби (12) у кожен гайку шлангу (11), прикрутіть одну гайку на змішувачі (6), а іншу до ручного душу (10). Встановіть ручний душ на тримач (17).

KOLLER POOL

service@kollerpool.eu
kollerpool.com